

# Unidirectional Dynamic Microphone

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Unidirectional Dynamic Microphone delivers acoustic clarity and accuracy. Its unidirectional pickup pattern controls feedback, reduces pickup of undesired signals and provides increased sensitivity. Use your microphone for high-quality recording and sound-reinforcement applications where wide, smooth frequency response is needed.

Your microphone's features include:

**Balanced Low-Impedance Output** — compatible with professional or amateur equipment with a microphone jack.

**16-Foot Cord** — lets you connect to professional-quality public address (PA) systems and move around a room with ease while holding the microphone.

**Microphone Holder** — swivels so you can adjust the position of the microphone.

**Wire-Mesh Windscreen** — cuts down on wind noise and breath pops.

**Built-In On/Off Switch** — gives you convenient control of the microphone.

## OPERATION

 
**Note:** Be sure the microphone's **ON/OFF** switch is set to **OFF** before connecting it to a PA or recording system to prevent feedback.

1. Plug your microphone's 3-pin (XLR) plug into the corresponding end of the supplied cord.
2. Plug the cord's other end (a 1/4-inch [6.35 mm] plug) into the microphone jack of your PA or recording system.


3. Turn on your PA or recording system.
4. Set the microphone's **ON/OFF** switch to **ON**. When you finish using the microphone, set **ON/OFF** to **OFF**.

## Using the Microphone Holder


To use the supplied microphone holder with your microphone, screw it down, onto the top of a microphone stand. Then slide the microphone into the larger end of the holder until it is secure.

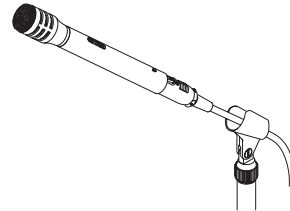

## POLAR PICKUP PATTERN

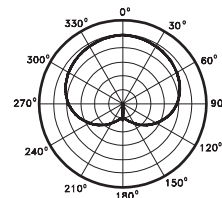 

## FREQUENCY RESPONSE

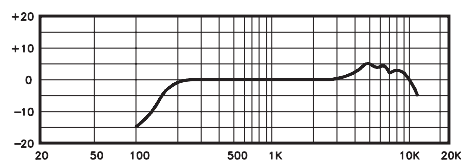 

 **RadioShack**<sup>®</sup>  
www.radioshack.com<sup>™</sup>

© 2000 Tandy Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by Tandy Corporation.

## SPECIFICATIONS

Type .....	Dynamic
Directivity .....	Unidirectional
Impedance (at 1 kHz) .....	500 Ohms ± 30%
Sensitivity (at 1 kHz) .....	-76 dB ± 3 dB (0 dB = 1V/μbar)
Frequency Response .....	100 — 15,000 Hz
Cable .....	16 ft (4.87 m) length x <sup>3</sup> / <sub>16</sub> inch (4 mm) diameter
Plug .....	<sup>1</sup> / <sub>4</sub> inch (6.35 mm) phone plug
Weight (Including Cable) .....	11.28 oz (320 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

33-3023  
03A00  
Printed in Taiwan