



25-Watt Indoor/Outdoor Powerhorn

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack 25-Watt Indoor/Outdoor Powerhorn is great for paging or music reproduction from a medium-power PA system. You can even use the powerhorn in a talk-back paging system, such as those used in many schools. The unique design is rust-proof and water and shock resistant.

INSTALLATION

 
 
 
The powerhorn's light weight and compact size make installation simple. Follow these steps to install the powerhorn.

1. Connect the speaker wire with the white stripe to the PA system's negative (-) terminal.
2. Connect the speaker wire without a stripe to the positive (+) terminal.
3. Follow the wiring instructions provided with your PA system.
4. Attach the powerhorn's mounting bracket to the mounting location, using screws and nuts (not supplied).

SPECIFICATIONS

Power Handling	25 Watts (RMS)
Maximum Power	50 Watts (maximum)
Voice Coil Impedance	8 Ohms
Frequency Response	500–10,000 Hz
Horn Diameter.....	4 × 6 Inches (10.2 × 15.3 cm)
Overall Length	8 Inches (20.3 cm)
Weight	26.4 oz (750 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.





Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

40-1440
04A00
Printed in Taiwan

