

IMPORTANT NOTICE

CD-3840 Portable CD Player

Cat. No. 42-5098

The instructions under "Charging Rechargeable Batteries" on Pages 6–7 of your Owner's Manual are for RSU 11672508 nickel-cadmium batteries only. You cannot use your CD player to charge any other rechargeable nickel-cadmium batteries.



© 2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

01A00

Printed in Hong Kong

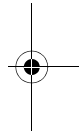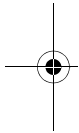

IMPORTANT NOTICE

CD-3840 Portable CD Player

Cat. No. 42-5098

The instructions under "Charging Rechargeable Batteries" on Pages 6–7 of your Owner's Manual are for RSU 11672508 nickel-cadmium batteries only. You cannot use your CD player to charge any other rechargeable nickel-cadmium batteries.

© 2000 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

01A00

Printed in Hong Kong

