

Noise-Canceling Desktop Computer Microphone

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Noise-Canceling Desktop Computer Microphone is designed for vocal transmission and speech recognition applications in computers and public address systems. Its noise-cancellation technology filters out background noise so the voice is transmitted clearly.

Its other features include:


Hands-Free Base — lets you place the microphone on a desktop, freeing your hands for other tasks while you speak.

Flexible PVC Rubber Gooseneck — lets you adjust the microphone to a convenient position.

Gold-Plated Stereo Plug — for excellent contact to the connected device.

INSTALLATION

1. Turn the base upside down and pull the gooseneck's cable into the base until the gooseneck is resting against the base.
2. Flip the base over and align the gooseneck's two mounting tabs with the matching slots on the base, then press the gooseneck into place.

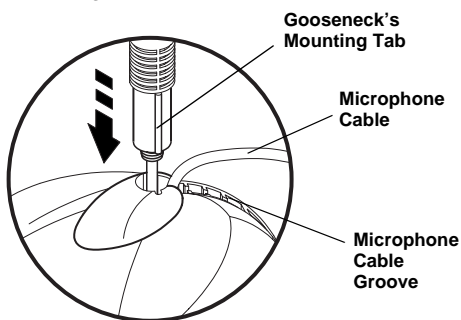

Note: Position the extra length of the gooseneck cable inside the base properly so the base stands steadily.

3. Guide the microphone cable through the groove on the base. Press it down and secure it with the tabs.
4. Insert the microphone cable's plug into your audio equipment's microphone jack.

INSTALLING BATTERIES

When connecting the microphone to an amplifier, install two AA batteries (not supplied) in the battery compartment inside the microphone base to power the electret condenser microphone element to amplify the microphone signal the amplifier requires.

Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

You can operate the microphone with or without batteries when connecting to a computer's microphone jack which does not require amplified microphone signal.

When the microphone stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries.

- If you do not plan to use the microphone with batteries for a month or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

OPERATION

1. Place the microphone in a convenient location, bending the gooseneck as necessary.
2. Push the power switch on the microphone up to turn on the microphone.
3. With the microphone about 4 in (10 cm) away from your mouth, speak in a clear and steady voice.
4. Adjust the audio equipment's volume as desired.


When you are not using the microphone, slide the power switch down to turn the power off.

SPECIFICATIONS

Microphone Type	Electret Condenser
Directivity Pattern	Noise-Canceling
Impedance	4.5 kOhms
Sensitivity (at 1 kHz)	-56 dB \pm 4dB
Test Condition	3V DC, RL = 6.2 kOhms, L = 50 cm
Frequency Response	100 Hz–10,000 Hz
Operating Voltage	2 V–10 V DC
Cable (Diameter \times Length)	2.5 mm \times 1.8 m (6 ft)
Plug	1/8-inch Gold-Plated Stereo Plug (3.5 mm)

Specifications are typical; individual units may vary. Specifications are subject to change and improvement without notice.

FREQUENCY RESPONSE CURVE

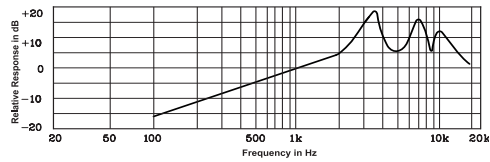

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or re-installation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99