



Thank you for buying the RadioShack “Fold-Up” Stereo Speaker System, which is ideal for use with your notebook computer, portable CD, cassette, or MP3 player. The dual 2-inch wide-range speakers are for use near a notebook computer. The built-in cable allows easy connection and cable storage. The speakers fold up and fit into the supplied carrying pouch for easy carrying.

CONNECTION

1. Open the folded speakers and remove the 1/8-inch (3.5 mm) stereo plug from the plug holder on the cabinet.
2. Place the opened speakers on a level surface.
3. Insert the stereo plug into the audio output jack on the notebook computer or stereo. ↙

When you finish using the speakers, disconnect the stereo plug from the audio output jack, route the speaker cable along the recess on the left speaker frame, place the stereo plug to the plug holder, then close the speaker cabinets.

↙ NOTE ↙

- Ensure the audio source is off and its volume control is at the minimum level.
- If the audio source does not have a 1/8-inch (3.5 mm) jack, you can obtain an adapter plug at your local RadioShack store.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

↙ — Note

© 2003 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com
are trademarks used by
RadioShack Corporation.

SPECIFICATIONS

Speaker	2 Inches (50 mm)
Impedance	8 ohms
Power Capacity	0.5 W/CH
Dimensions (HWD)	2 ¹³ / ₁₆ × 4 ⁹ / ₁₆ × 1 ⁵ / ₈ Inches (71 × 116 × 43 mm)
Weight (Without Pouch)	4.48 oz (127g)

Specifications are typical; individual units may vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX
76102

12/99