

Join Goku and summon the dragon for an epic adventure!

# Dragon Ball-Z Pinball

OWNER'S MANUAL — Please read before using this equipment.

Your Dragon Ball-Z Pinball game is a mini pinball machine that will provide you hours of fun! The game is easy to assemble and play. You can fight with the main characters and get points.

**Important:** This game is not suitable for children under 3 years of age.

 
## INSTALLING BATTERIES

Your pinball game requires three C batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

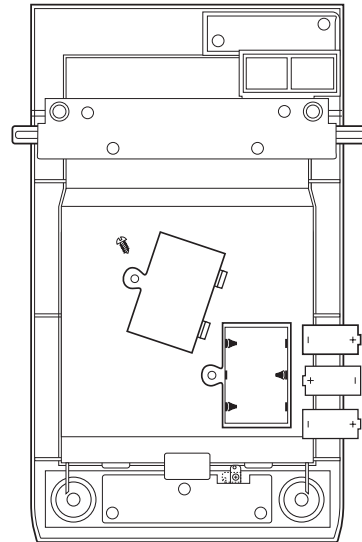

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover and open the cover.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.

When the sound weakens or becomes distorted or the game stops operating properly, replace the batteries.

 **RadioShack**  
www.radioshack.com™

© 2000 Tandy Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by Tandy Corporation.


**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the pinball game for a week or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.


## MAKING THE CONNECTIONS

 Before you play the game, you must connect the header, the feet, and the characters to the pinball machine.


Attach the feet as shown.

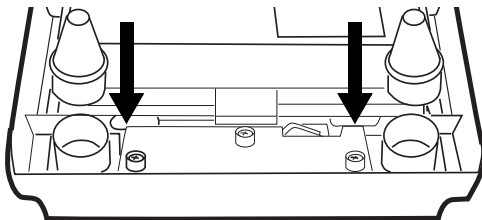

 
Place the character figures on the domed bumpers facing right. Then twist them to the right (clockwise) until they stop to secure them.

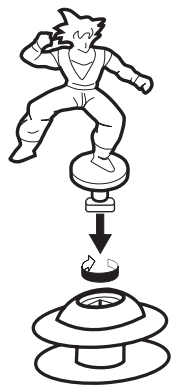

 To attach the header, connect the base of the header to the slots on top of the pinball machine.

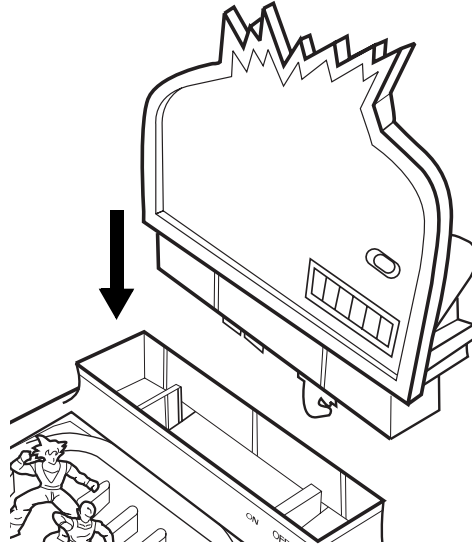


 Turn the base over and rotate the locking tab underneath the pinball machine clockwise to secure the header.

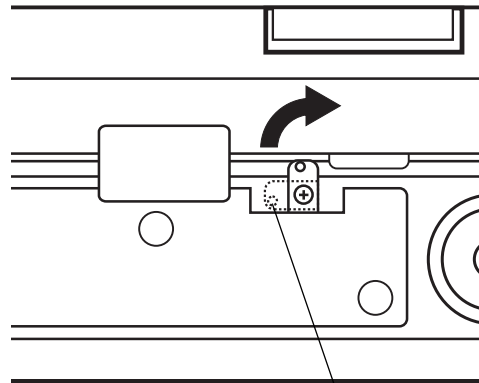

Locking Tab

## PLAYING THE GAME

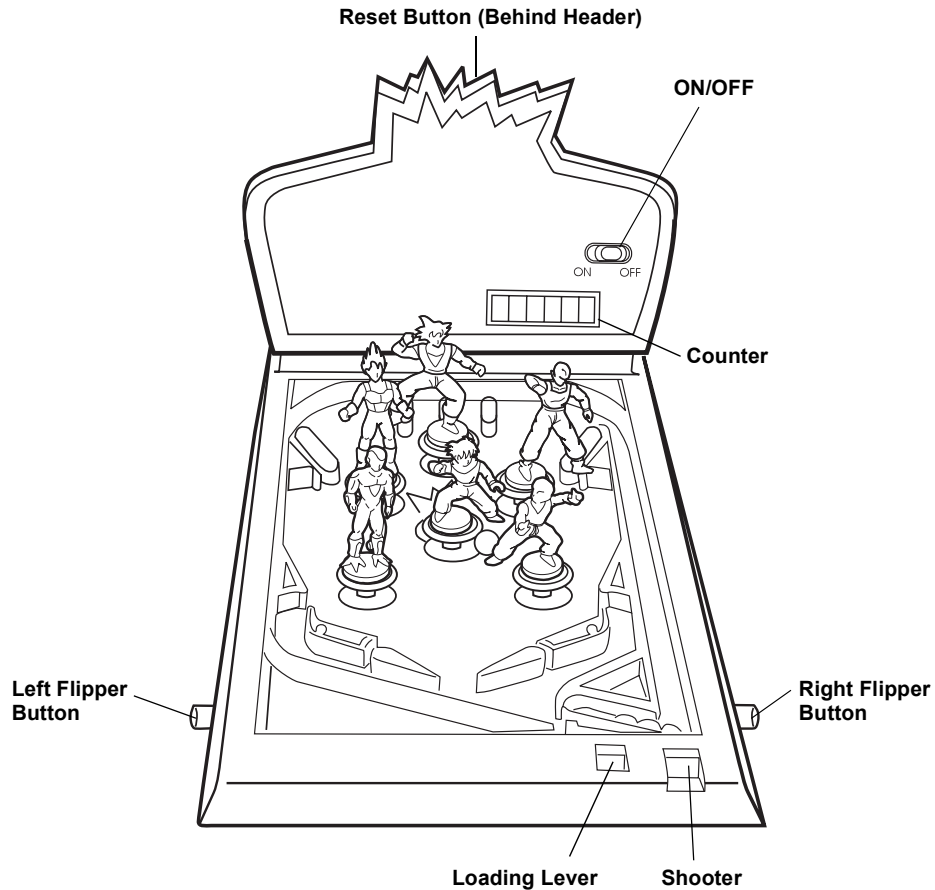 

1. Slide **ON/OFF** to **ON** to turn on the game.
2. Press the reset button (behind the header) to reset the score to zero.
3. Pull the loading lever down to load all three balls into the ball tube.
4. Pull the shooter to release the first ball. You hear sounds and see flashing lights as the ball hits bumpers on the game board.
5. Press the right and left flipper buttons to keep the ball in play. The game ends after all three balls pass through the flippers or the exit lane. Your score appears on the counter.
6. Repeat Steps 2-5 to play another game.

## CARE

To enjoy your RadioShack Dragon Ball-Z Pinball Game for a long time:

- Keep the pinball game dry. If it gets wet, wipe it dry immediately.
- Use and store the pinball game only in normal temperature environments.
- Handle the pinball game gently and carefully. Do not drop it.
- Keep the pinball game away from dust and dirt.
- Wipe the pinball game with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the pinball game's internal components can cause a malfunction and might invalidate its warranty. If your pinball game is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

60-1205  
05A00  
Printed in Hong Kong