

# Radio Control Helicopter

OWNER'S MANUAL — Please read before using this equipment.

Flashing lights and a spinning propeller make this helicopter lifelike!

Just like a real helicopter, your RadioShack Radio Control Helicopter's propeller spins as it moves! There's also a light on top of the helicopter that lights while it moves forward. The one-button transmitter lets you control the helicopter easily.

## INSTALLING BATTERIES


Your Radio Control Helicopter requires two AA batteries (not supplied). You also need one 9V battery (not supplied) for the transmitter. For the best performance and longest life, we recommend RadioShack alkaline batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

## In the Helicopter

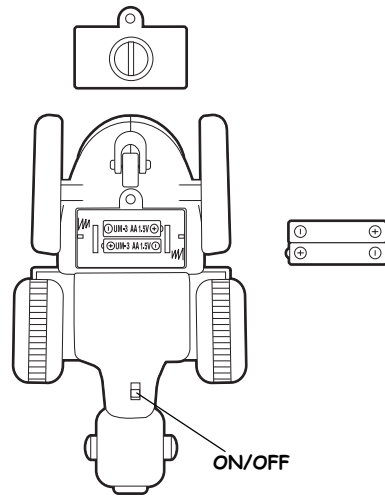

1. Slide **ON/OFF** on the bottom of the helicopter's tail to **OFF**.
2. Use a Phillips screwdriver to loosen the screw on the battery compartment cover and remove the cover.
3. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover and secure it with screw.

If the helicopter moves slowly or not at all, replace the batteries.


**Caution:** If you do not plan to use the helicopter for a week or more, remove the batteries. Batteries can leak

 **RadioShack**<sup>®</sup>  
www.radioshack.com<sup>™</sup>

© 2000 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

chemicals that can destroy electronic parts.

### In the Transmitter

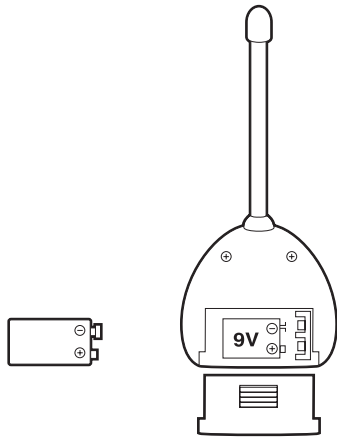

1. Press and slide the battery compartment cover off the transmitter.
2. Place the battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and snap it shut.

When the transmitter's range decreases, replace the battery.

### OPERATION

**Warning:** Never play with your helicopter in the street.

**Note:** For maximum range, hold the transmitter with the antenna pointing straight up.

1. Slide **ON/OFF** on the helicopter to **ON**.
2. The helicopter's transmitter has one control button. Hold down the button to move forward with the propeller spinning and top light on. The helicopter stops when you release the button.

3. To drive the helicopter backward and make it turn, hold down the button on the transmitter again.
4. When you finish playing with the helicopter, slide **ON/OFF** to **OFF**.

### THE FCC WANTS YOU TO KNOW

Your helicopter or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your helicopter or its transmitter is causing the interference, turn off your helicopter and release the transmitter's control button. If the interference goes away, your helicopter or its transmitter is causing it.

Try to eliminate the interference by:

- moving your helicopter and its transmitter away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your helicopter.

Changes or modifications to this product in any way other than as detailed by the Owner's Manual, could void your authority to operate this product.

## CARE

To enjoy your Radio Control Helicopter for a long time:

- Keep the helicopter dry. If it gets wet, wipe it dry immediately.
- Use and store the helicopter only in normal temperature environments.
- Handle the helicopter gently and carefully. Do not drop it.
- Keep the helicopter away from dust and dirt.
- Wipe the helicopter with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the helicopter's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your helicopter is not performing as it should, take it to your local RadioShack store for assistance.

## Helpful Hints

If the helicopter's motor runs but does not respond to the transmitter, move closer to the helicopter and try again.

If someone uses a CB nearby, it might interfere with control of the helicopter. If this happens, move the helicopter away from the CB.

You cannot operate the helicopter near devices with transmitters that use the same frequency (49 MHz).

If the helicopter moves slowly and you have installed fresh batteries, check the wheel mechanisms for lint thread, hair or dust.

## USER-REPLACEABLE PARTS

You can order these parts through your local RadioShack store.

Description	RSU #
Transmitter	12258646
Transmitter Battery Door	12258463
Receiver Battery Door	12258455
Owner's Manual	12258505

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

60-2771  
05A00  
Printed in Hong Kong