



# The Grinch Sleigh Game

OWNER'S MANUAL — Please read before using this equipment.

Hop in with the Grinch  
(look out for Max!)  
guide the sleigh  
through the slopes  
but don't lose  
all the packs!



Compete with a friend,  
or play on your own.  
Either way you decide  
you must help the  
Grinch get home.

From Whoville to  
Mt. Crumpit  
you must drive  
really speedy!  
But don't fall off the trail  
(by so much as your feety)!

The sleigh will need power.  
(Batteries we do not supply.)  
Two C batteries at your local  
RadioShack store you can buy!

## INSTALLING BATTERIES


Your Grinch Sleigh Game, perfect for ages 5 and up, requires two C batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

- Slide OFF/LOW/HIGH to OFF.

- Loosen the screw on the battery compartment cover and remove the cover.
- Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

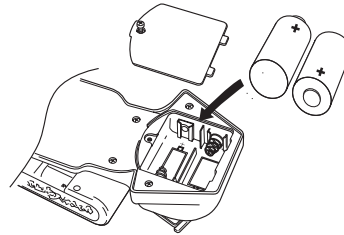


- Replace the cover and tighten the screw.

When the game stops operating properly, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the game for a week or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## PLAYING THE GAME

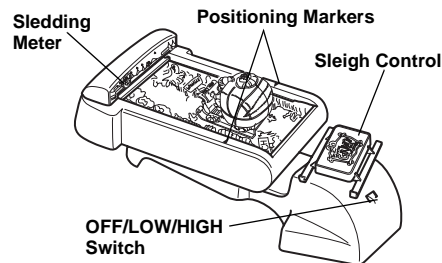

- Set the game on a flat surface and slide the sledding meter all the way left to the START position.

 **RadioShack**  
www.radioshack.com™

© 2000 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.  
The movie *Dr. Seuss' How the Grinch Stole Christmas* © 2000 Universal Studios. Based on *How the Grinch Stole Christmas!* book and characters TM and © Dr. Seuss Enterprises, L.P. 1957. Licensed by Universal Studios Licensing, Inc. All Rights Reserved.






2. Set the sleigh control to the neutral position (level with the flat surface).
3. Position the Grinch's sleigh on the snow course between the positioning guides (▶ and ◀). When the sleigh is properly positioned, you can move it from left to right using the sleigh control.
4. Slide OFF/LOW/HIGH to LOW (for a slower pace) or HIGH (for a faster pace).  
  
The snow course weaves from side to side, and the sledding meter begins to move.
5. Use the sleigh control to guide the sleigh through the course.  
  
To move the sleigh to the right, push the right side of the sleigh control.  
  
To move the sleigh to the left, push the left side of the sleigh control.

Use the sledding meter to see how far you can go without falling off the course.

If the sleigh falls down or gets off the course, slide OFF/LOW/HIGH to OFF. Put the sleigh back on the snow course between the positioning markers and try again.

**Cautions:**

-  Do not put anything on the snow course except the Grinch Sleigh.
-  Do not lift up the game by the snow course.
-  Keep your fingers or hair out of the space between the snow course and the main body.

**CARE**



Keep the game dry; if it gets wet, wipe it dry immediately. Use and store the game only in normal temperature environments. Handle the game carefully; do not drop it. Keep the game away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the game's internal components can cause a malfunction and might invalidate its warranty.

If your game is not performing as it should, take it to your local RadioShack store for assistance.

**Limited Ninety-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99