

# Crane Bank

60-1228

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !


If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- ⚠ — Warning
- ! — Important
- ⚡ — Caution
- 💡 — Hint
- 📄 — Note

## ⚠ WARNING ⚠

CHOKING HAZARD - Small Parts.  
Not for Children Under 3 years.

 Thank you for purchasing the RadioShack Crane Bank. It holds twelve small toys (included), gum balls (not included), or other small prizes. Calliope music, flashing lights, and the joysticks that control the crane are activated when a quarter is inserted into the coin slot. You can easily retrieve your coins from the Crane Bank through an opening on the bottom of the bank. ⚠

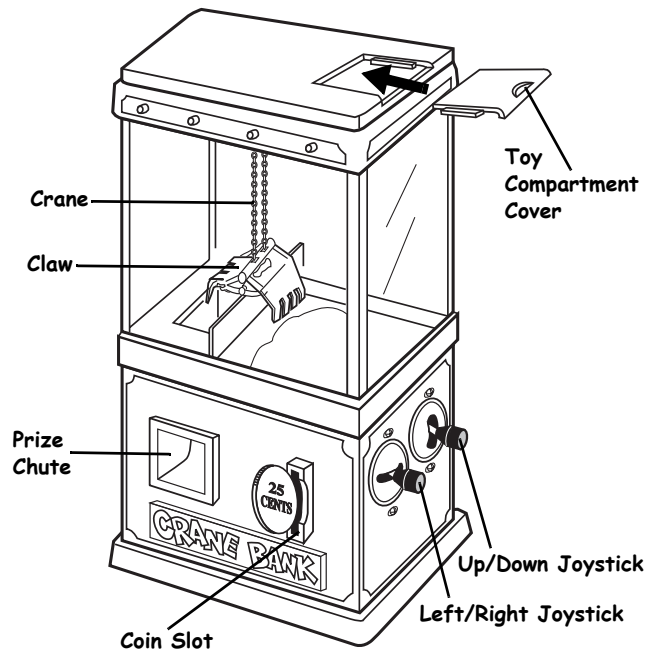

**RadioShack**®

www.radioshack.com<sup>SM</sup>

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

**⚠ WARNING ⚠**

- Dispose of old batteries promptly and properly; do not burn or bury them.
- Do not recharge non-rechargeable batteries.

**⚡ CAUTION ⚡**

- Use only fresh batteries of the required size and recommended type.
- Batteries should be installed by an adult.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the Crane Bank for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Never leave dead or weak batteries in the Crane Bank. Doing so could damage the bank.

**📌 NOTE 📌**

 
If your bank does not work properly after installing new batteries or during normal play, set **ON/OFF** to **OFF** and then slide back to **ON**.

## PREPARATION

### INSTALLING BATTERIES

Your Crane Bank requires four AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries. ⚠ ⚡

1. Slide **ON/OFF** on the bottom of the bank to **OFF**.
2. Use a Phillips screwdriver to loosen the screw on the battery compartment cover (on the bottom of the Crane Bank) and remove the cover.
3. Insert 4 AA batteries in the compartment according to the polarity symbols (+ and -) marked inside.

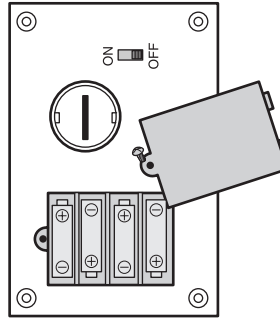


4. Replace the battery cover and secure it with the screw.

When the Crane Bank stops operating properly, replace the batteries. 📌

## INSTALLING THE TOYS

 1. Slide the compartment cover on the top of the Crane Bank out and remove it.
2. Unfasten the tag in the claw then carefully pull on the tag to remove it.

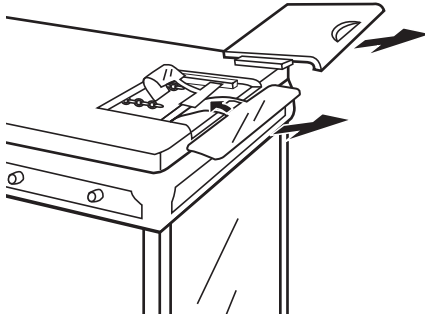

3. Drop the supplied toys down into the compartment and replace the compartment cover.

## OPERATION

1. Slide ON/OFF on the bottom of the Crane Bank to ON, then place the Crane Bank on a flat surface.
2. Insert a quarter into the coin slot on the front panel of the Crane Bank. The Crane Bank starts playing music, the four indicator lights blink, and the joysticks are activated. !
3. Use the left/right joystick on the right side of the bank to move the claw to the left and right, stopping directly above the toy that you would like to retrieve.

Use the up/down joystick on the right side of the bank to lower or raise the claw. Lower the claw down onto the toy of your choice.

4. Once in position, repeatedly move the up/down joystick up and down until the claw closes and continues moving upward.

If you fail to retrieve a toy on your first attempt, move the claw by shifting the up/down joystick and try again. You may try as many times as you like as long as the music continues playing. Once the music stops, your time is up and you must insert another quarter to continue the game.

### ! IMPORTANT !

- When using the up/down joystick to move the claw up and down or close it, it may be necessary to move the joystick to the "up" position to go down, and to the "down" position to go up. It all depends on the position of the claw (at the top or bottom of the bank) when the game begins. This also applies to opening and closing the claw. Sometimes you will need to move the up/down joystick to the "up" position to open or close the claw, and sometimes you will need to move it to the "down" position to open or close the claw.
- When using the up/down joystick and the claw does not move in the desired direction, try holding the joystick in that position for a few seconds. If it still does not move or seems stuck, move the joystick in the opposite direction.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

5. Release the up/down joystick when the claw moves to the top. Use the left/right joystick to move the claw to the left.
6. Use the up/down joystick to lower the claw. The claw opens and drops the toy into the prize chute.
7. When you finish playing with your Crane Bank, slide ON/OFF on the bottom of the Crane Bank to OFF.

### RETRIEVING YOUR COINS

1. Slide ON/OFF on the bottom of the Crane Bank to OFF.
2. Turn the knob on the bottom of the Crane Bank counterclockwise until it stops. Then lift and remove the knob.
3. Replace the knob by aligning its' tabs with the holes on the compartment housing, then turn the knob clockwise until it stops to lock it in place.

### CARE

Keep the bank dry; if it gets wet, wipe it dry immediately. Use and store the bank only in normal temperature environments. Handle the bank carefully; do not drop it. Keep the bank away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

### SERVICE AND REPAIR

If your bank is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the bank's internal components can cause a malfunction and might invalidate its warranty.