

# RC Preschool Jalopy

60-2786

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.


⚠ — Warning

⚡ — Caution

✓ — Note

! — Important

💡 — Hint

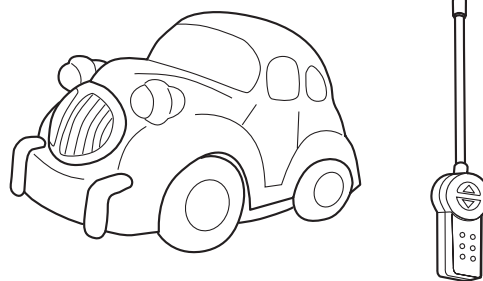

Thank you for purchasing the RadioShack RC Preschool Jalopy. Your jalopy is built to handle the road in style, whether indoors or outside. It can reach speeds of up to 88 feet per minute and comes in two frequencies (27 and 49 MHz) so you can race with a friend. The jalopy is perfect for beginning racers, ages three and up.

## FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	RC Preschool Jalopy
Model:	60-2786
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your jalopy.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

## INSTALLING BATTERIES

You need three AA batteries to power the jalopy, and one 9-volt battery for its transmitter. ⚠ ⚡

When the jalopy stops operating properly, replace the batteries. The jalopy's battery life is about 90 minutes of continuous driving.

## IN THE JALOPY

You need three AA batteries (not supplied) to power your jalopy. For best performance and longest life, we recommend RadioShack alkaline batteries.

## ⚠ WARNING ⚠

Dispose of old batteries and the battery pack promptly and properly; do not burn or bury them.

## ⚡ CAUTION ⚡

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the jalopy for several days, remove the batteries. Batteries can leak chemicals that can damage the jalopy's electronic parts.



## THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in



**RadioShack**

www.radioshack.com™

© 2002 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com  
are trademarks used by RadioShack Corporation.

1. Slide **ON/OFF** on the bottom of the jalopy to **OFF**.
2. Use a Phillips screwdriver to remove the battery compartment cover's screw from the bottom of the jalopy, then remove the cover.
3. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover and secure it with the screw.

### IN THE TRANSMITTER

The transmitter requires one 9-volt battery (not supplied). For best performance and longest life, we recommend RadioShack alkaline batteries.

1. Use a Phillips screwdriver to remove the battery compartment cover's screw, then remove the cover.
2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screw.

### OPERATION

1. Slide **ON/OFF** on the bottom of the jalopy to **ON**.
2. Hold down ▲ to move forward. The headlights turn on and move. ☸
3. Release ▲ to stop.
4. Hold down ▼ to circle backward. The headlights turn on and move.
5. When you finish driving the jalopy, slide **ON/OFF** to **OFF**.

### HELPFUL HINTS

These hints can help you get the most enjoyment from your jalopy.

- Running your jalopy continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your jalopy's battery power dies, let the jalopy cool at least 10 minutes before installing new batteries.
- If the jalopy's motor runs but the jalopy does not respond to the transmitter, move the transmitter closer to the jalopy and try again. The control distance is about 30 feet.
- If someone uses a CB nearby, it might interfere with control of the jalopy. If this happens, move the jalopy away from the CB.
- You cannot operate your jalopy near devices with transmitters that use the same frequency (27 or 49 MHz). Check the jalopy's box to see which frequency your jalopy uses.

### CARE

Keep the jalopy dry; if it gets wet, wipe it dry immediately. Use and store the jalopy only in normal temperature environments. Handle the jalopy carefully; do not drop it. Keep the jalopy away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

### SERVICE AND REPAIR

If your jalopy is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the jalopy's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

**CAUTION**  
Do not play with your jalopy in the street.

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99