

R RadioShack

Brum *Preschool* RC Car

60-2797

Step One


Installing Batteries

You will need...

Four AA batteries for the car
One 9V battery for the transmitter

Put AA Batteries in the Car



- Slide **ON/OFF** switch at the bottom of your Brum to **OFF**.
- Insert a coin into the slot on the battery cover and slide the cover back until it clicks. Lift open the cover.
- Install four AA batteries and match + and - signs with the product.
- Close the cover and slide it forward until it clicks.

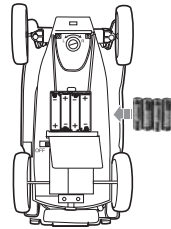

Do not try to remove hinged battery compartment cover.

Put 9V Battery in Transmitter


- Slide the battery compartment cover, located on the bottom, in the direction of the arrow and remove it.
- Insert one 9V battery and match the + and - signs with the product.
- Replace the battery cover.

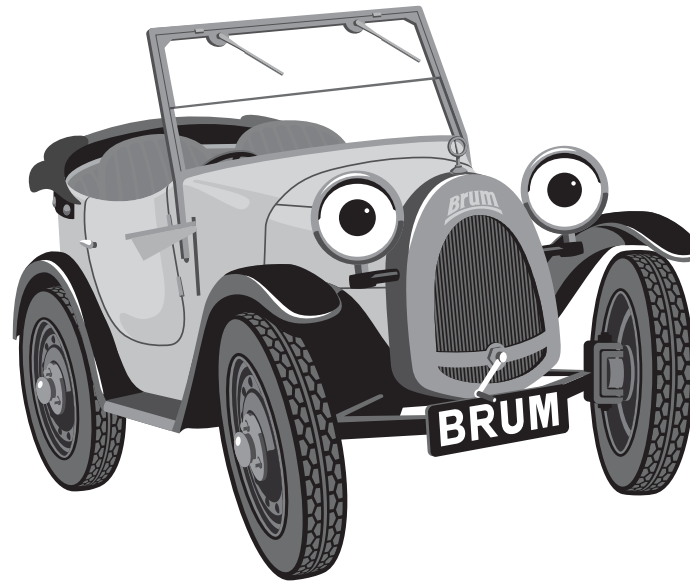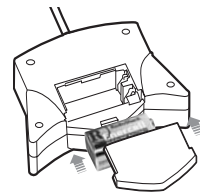

Step Two


Driving the Brum

- Slide the **ON/OFF** switch at the bottom of your Brum to **ON**. The Brum sounds its engine, honks its horn, rocks its body and greets you by rotating its starter handle.
- Use the transmitter's control levers to control the Brum's movement and direction.

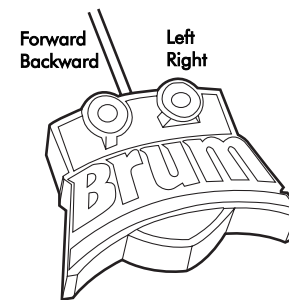

Left Control Lever

- Push the left control lever forward to move forward. The Brum honks its horn and sounds its engine.
- Pull the lever backward to move backward. The Brum sounds its engine.
- Release the lever to stop the Brum with tire squeal sound.

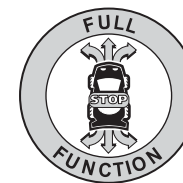

Right Control Lever


- Push the lever left to turn left, and right to turn right. The Brum leans left and right as it changes directions.
- Release the lever to go straight.

Turn the **ON/OFF** switch to **OFF** when you finish driving the Brum.


What's Included

Brum Preschool RC Car
Transmitter Owner's Manual

Rear View of Brum

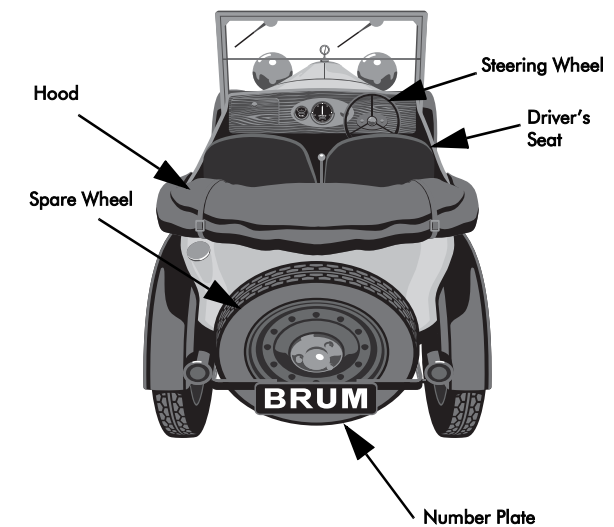

Brum on the Go

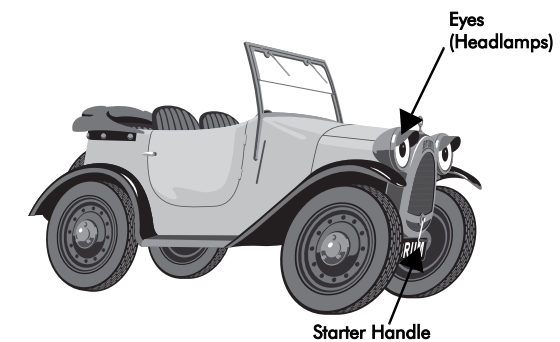

Eyes rotate and starter handle twirls when moving forward.

Safe Use and Care

- The Brum is not suitable for children under three years of age.
- Never play with the Brum in the street.
- Remember to turn the Brum's ON/OFF switch to OFF when you finish playing with it. This provides longer battery life.
- Check the Brum's wheels frequently for dirt, debris, or lint.
- To clean the Brum and/or transmitter, simply wipe them with a cloth. Do not immerse them in water.
- Keep this owner's manual for future use.

The FCC Wants You to Know

Your Brum might cause TV or radio interference even when it is operating properly. To determine whether your Brum is causing the interference, turn off your Brum. If the interference goes away, your Brum is causing it. Try to eliminate the interference by:

- moving your Brum away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Brum.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	Brum Preschool
Model:	60-2797
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-4300

Helpful Hints

- Your Brum comes in two frequencies, so you and your friends can play together. Check your box to see which frequency you have.
- Running your Brum for long periods of time can generate high heat levels, which result in wear and tear on the motor. If the Brum's battery power dies, let the Brum cool down for 10 minutes before installing new batteries.
- If the motor runs, but does not respond to the transmitter, move the transmitter closer to the Brum and try again.
- If someone is using a CB nearby, this may cause interference. Move your Brum away from the CB. You cannot operate your Brum near devices with transmitters that use the same frequency.
- If your Brum does not drive in a straight line, use a coin to adjust the wheel alignment on the bottom of your Brum. If the Brum is pulling to the right, turn the coin toward the L. If it pulls to the left, turn the coin toward the R.

Battery Notes

- Any batteries purchased for use in this toy may pose a hazard to children. Please check the safety notice supplied with the batteries before use.
- If your Brum moves slowly, or not at all, replace the batteries. For the best performance and longest life, we recommend RadioShack alkaline batteries.
- If the Brum moves slowly after installing fresh batteries, check the wheels for lint, thread, hair, and/or dust.
- When the transmitter's range decreases, replace your batteries.
- Never leave dead or weak batteries in the Brum or transmitter.
- Use fresh batteries of the required size and recommended type only.
- Do not mix old and new batteries.
- Never mix alkaline batteries with other types of batteries.
- If you do not plan to use the Brum for several days, remove all batteries from the transmitter and the Brum. Batteries can leak chemicals that may destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Specifications

Batteries..... Car - 4 AA Batteries (Not Included)
Transmitter - One 9V Battery (Not Included)
Battery Life 25 Minutes
Frequency 27/49 MHz
Control Distance..... 60 Ft.
Speed 160 Ft./Min.
Dimensions (LWH) 12 x 7 x 8.5 Inches
(304.8 x 177.8 x 215.9 mm)

Specifications are subject to change and improvement without notice. Individual units may vary.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

60-2797
Printed in China
05A03