


# 20-Second Recording Module

OWNER'S MANUAL — Please read before using this equipment.

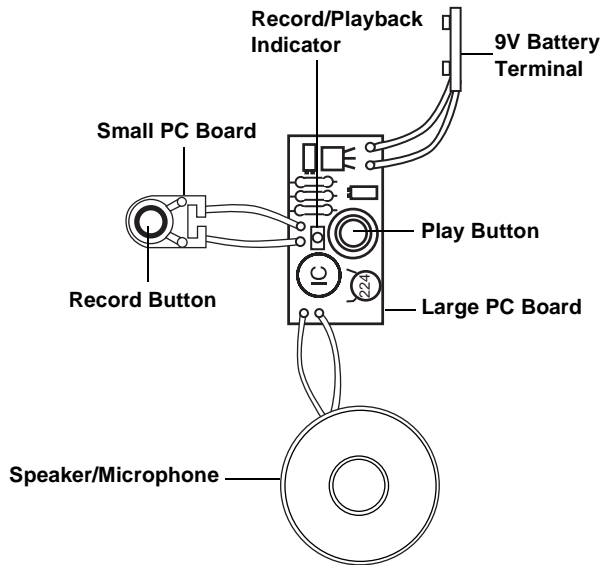

Your RadioShack 20-Second Recording Module provides quality recording and playback for a message up to 20 seconds. The single-message record/playback system is pre-wired and ready for installation in a cabinet.

Because the recording module is digital, you can record a new message as many times as you like without having to wait for a tape to rewind. Record your voice and add a picture to make a special keepsake for a loved one, or record a message to remind yourself of things to do.

## INSTALLING THE BATTERY

Your recording module requires one 9V battery (not supplied) for power. For the best performance and longest life, we recommend a RadioShack alkaline battery. Simply attach it to the battery terminal.

**Warning:** Dispose of an old battery promptly and properly. Do not burn or bury it.

### Caution:

- Use only a fresh battery of the required size and recommended type.
- If you do not plan to use the recording module for a month or longer, remove the battery. A battery can leak chemicals that can destroy electronic parts.

## RECORDING

1. Hold down the record button on the small PC board. The indicator lights.

2. Speak your message (up to 20 seconds) in a normal voice about 1–2 inches from the speaker.
3. Release the record button to stop recording. The indicator turns off.

**Note:** A new recording replaces the previous one.

## PLAYBACK

Press the play button located on the large PC board. The recording module plays your recording and the indicator flashes once when playback stops.

**Note:** When playback slows down, replace the battery. When you remove the battery, the recording module retains the recorded message until you install a new battery and record a new message.

## CARE

To enjoy your recording module for a long time:

- Keep the recording module dry. If it gets wet, wipe it dry immediately.
- Use and store the recording module only in normal temperature environments.
- Handle the recording module gently and carefully. Do not drop it.
- Keep the recording module away from dust and dirt.

Modifying or tampering with the recording module's internal components can cause a malfunction and might invalidate its warranty. If your recording module is not performing as it should, take it to your local RadioShack store for assistance.

## SPECIFICATIONS

Record/Playback Module .....	128K Cell Non-Volatile Analog Storage Array
Standby Current .....	<0.3 mA
Operating Current:	
Recording .....	<20 mA
Playback .....	<50 mA
Operating Voltage .....	9V DC
Power Source .....	One 9V Battery (not supplied)
Maximum Recording Time .....	20 Seconds

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99