

* FOR DISASSEMBLY, REMOVE THREE SCREWS (33-1, 33-2)

LCD COLOR TV

EXPLODED VIEW (160-0182)

FAXBACK DOC # 25164

