 
 


## **Important Battery Care Instructions**

 
- For best battery performance, it's important to **remove the battery** from the portable DVD player during periods of non-use over a day or two.

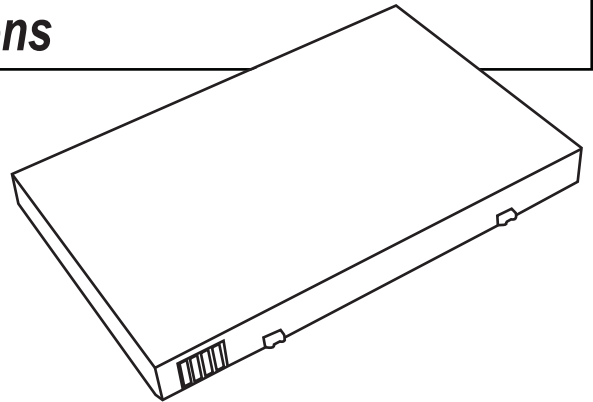

### Removing the Battery

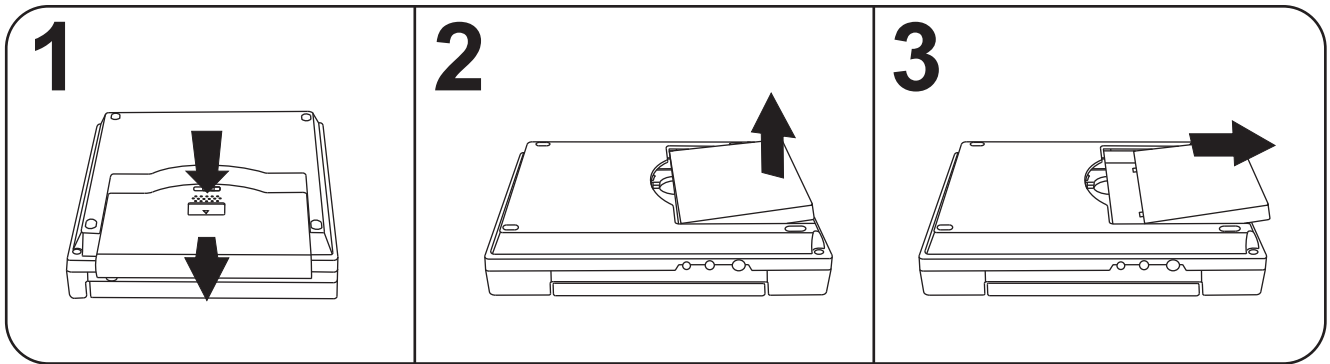

- For short periods of non-use under 1 day, keep the AC Adapter connected to the unit if possible to avoid battery discharge.
- Always remove the battery from the unit during storage to avoid over-discharge.

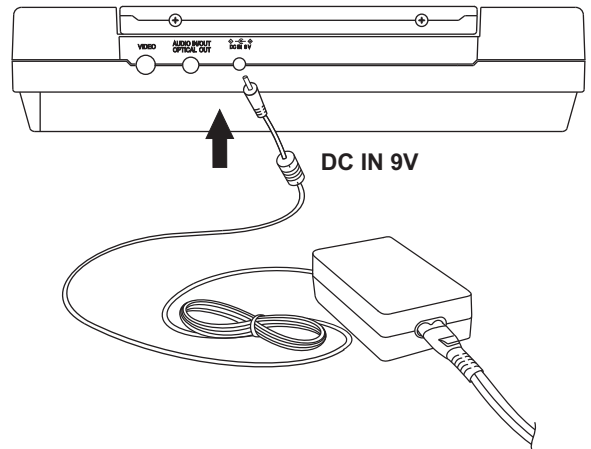

***Follow these instructions to assure optimum operation and greatest longevity from your battery!***